





## DC Distribution

- Connects and protects all heavy power connections—batteries, windlass, inverter/charger, engine starting, alternator etc.
- House battery powers all loads—a reserve battery is dedicated for engine cranking and communications backup-backup.
- Exceeds Australian survey and United States ABYC standards.
- Provides all connections to Energy Monitor and Alternator Regulator
- Provides cross-charge facility for reserve battery
- Provides solar panel and wind generator regulation
- Batteries and Inverter/Charger located under settee.

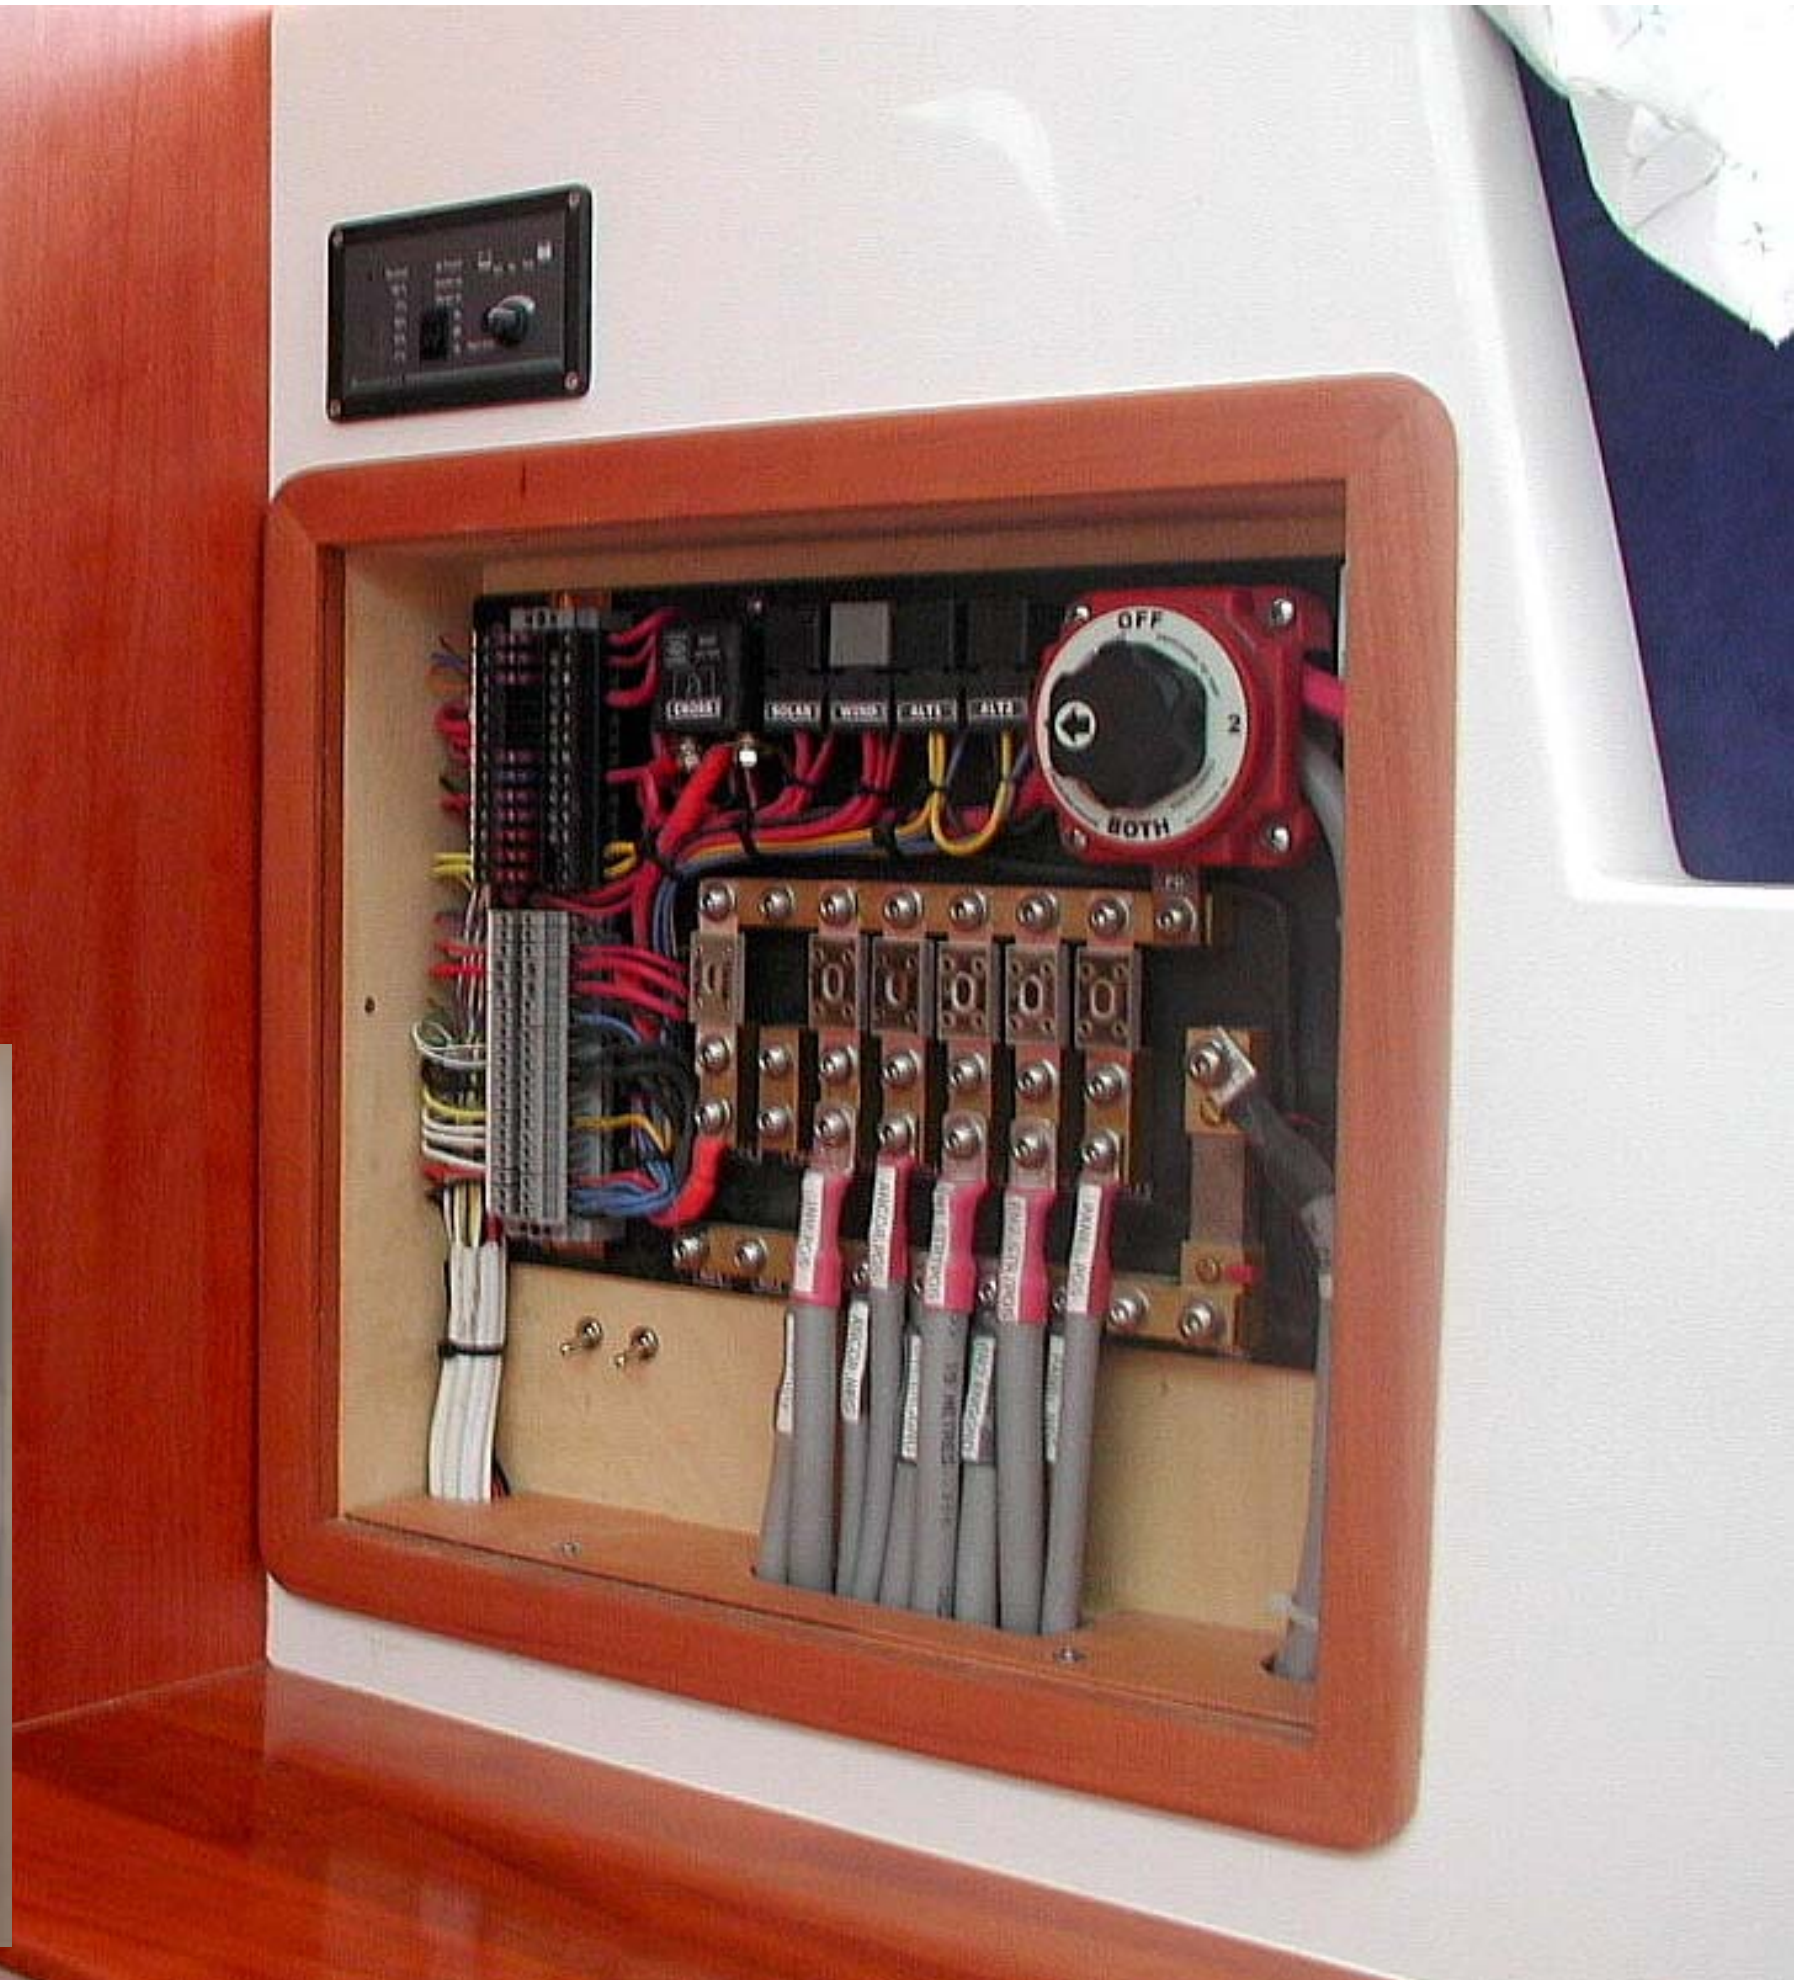

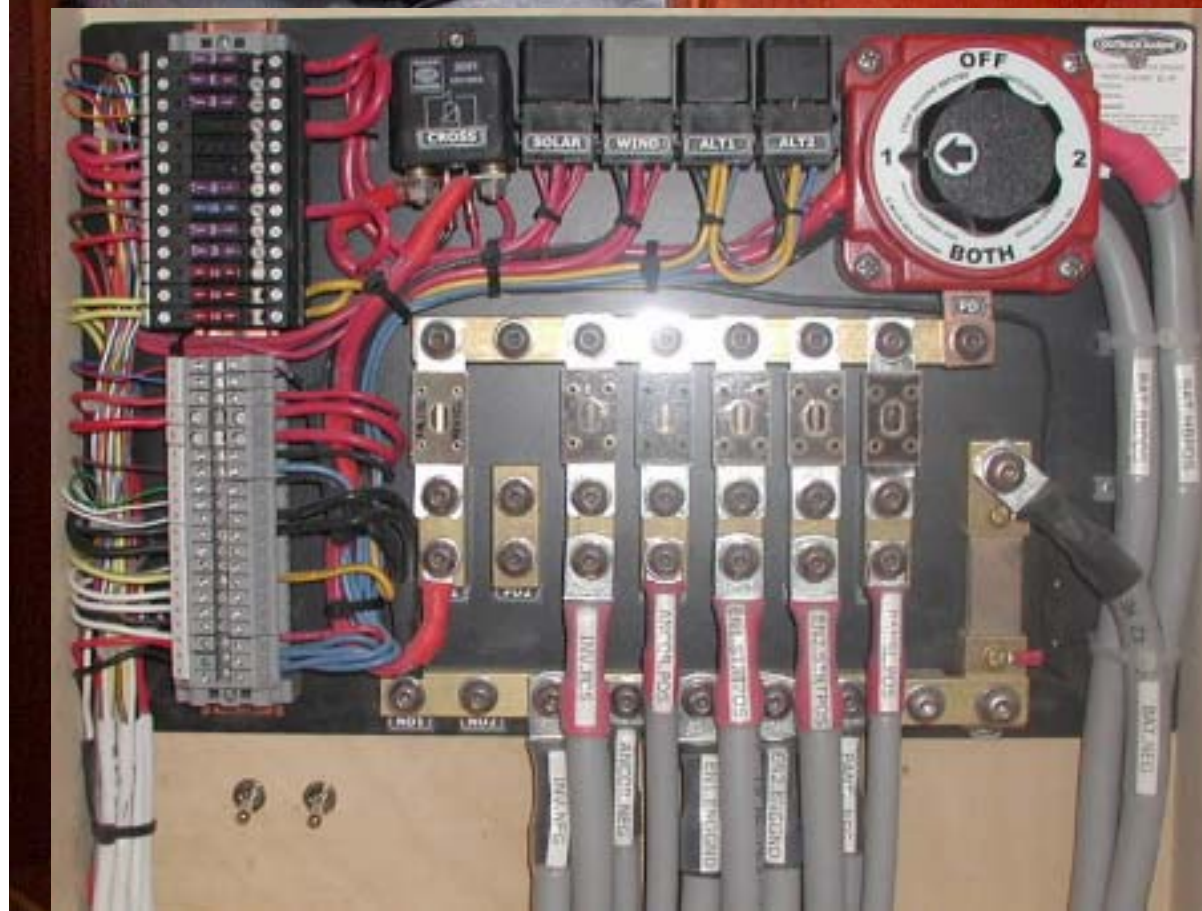

**Desalinator**

- Spectra Santa Cruz 380
- 60 litres per hour @ 20-amps/12-volts DC



**Alternator Upgrade**

- Additional 150-amp alternator
- Port and starboard alternators controlled by one Ample Power SAR regulator



**RL70RC Radar/Chart Plotter**

**Energy Monitor**