

# Instructions of ARM2601 Wall Fixed Installation for Panel TV

## 1. Technical parameter

Size of flat panel TV: 13"~27"  
left & right  $\pm 15^\circ$


Maximum load: 15 kg  
rotation 360°

Adjustable angle: up & down  $\pm 15^\circ$   
Distance from wall: 84~403mm

## 2. Part List

Please check the parts in the package in comparison with the following list. Make sure all of the parts are in the package. Never use defective parts. Never replace part with different specification.

Note: Incorrect installation may cause injury!

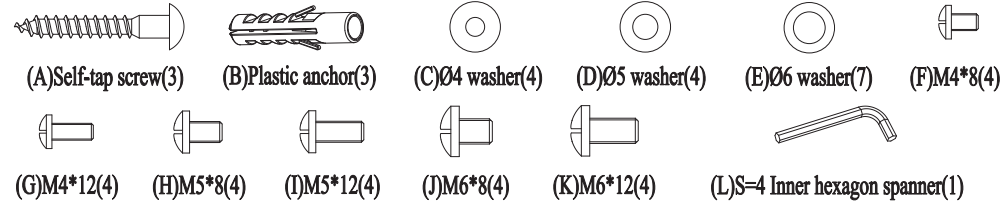

## 3. Installation and operation instructions

Note: please read the instructions carefully before installation!

**STEP-1**

Mount wall plate on wall  
For Brick, Concrete and Stone:  
Using the wall plate as a template and using the leveler to ensure the wall plate is level. Mark 3 holes for the long bolts as picture. Pre-drill these holes with a  $\phi 8$ mm bit to at least 50mm deep in the wall. Wall anchors(B) is inserted into the wall. Next mounting the wall plate to the wall using long bolt(A) and Long bolt washer (E).

For Wood studs:  
Using a stud finder to locate the one wood studs. Using the wall plate as a template, mark the 3 location for the long bolt as picture and using the leveler to ensure the wall plate is level. Pre-drill these holes with a  $\phi 5$ mm bit to at least 50mm deep in the wall. Next mounting the wall plate to the studs using the long bolt (A) and Long bolt washer (E).

**STEP-2**

Install TV plate on the TV back. Select four suitable bolts from the parts bag and screw them into the bolt-holes in the back of the TV. The TV plate mounted on the TV back should be mounted symmetrically and evenly.  
Important-Do not use power tool to fit bracket to TV. Carefully hand screw suitable bolts with screw driver.

**STEP-3**

Lift the TV by two person, Insert the TV together with the TV plate into the wall plate, then tighten the knob firmly.

**STEP-4**

Adjust the position and angle of the flat panel TV for convenient viewing. Using the inner hexagon spanner S=4 (L) to loosen the bolt before adjusting the view angle, and firmly tighten the bolt after adjustment. While adjusting, please take care of your hand to avoid clipping.

**STEP-5**

Route the cables along inside of the arm, the cables should be obligated some surplus in corner. With all cables in place, secure the cable covers in place. and pull the arm assembly in and out and check that the arm assembly moves freely. The cables surplus in corner can be adjusted by pulling the cables lightly to keep lax and avoid stretching or damaging the cables. Thus the cables will be in protected status inside of the arm all along when adjusting the viewing angles of the display. (Shown as Fig)

**STEP-6**

Please fasten the fixed nut as below procedure if the tilt angle cannot be fixed properly. Loosen the knob at first, then remove the TV together with the TV plate from the wall plate, Firmly tighten the fixed nut with a spanner in the clockwise direction. Insert the TV back to the wall plate, Tighten the knob to the TV plate tightly at last.

Please fasten the fixed nut as below procedure if the tilt angle cannot be fixed properly. Loosen the knob at first, then remove the TV together with the TV plate from the wall plate, Firmly tighten the fixed nut with a spanner in the clockwise direction. Insert the TV back to the wall plate, Tighten the knob to the TV plate tightly at last.