



**Low Voltage System
Out-door Cabinet**
(Cabinet OD1310-LV)

1 External Power Cable -


2 External Power Cable +

3 Fan Power Cable -/+


4 External Communication Cable

Pylontech Out-door Cabinet Cable Connection

Cables connection of **lower layer** 3 batteries


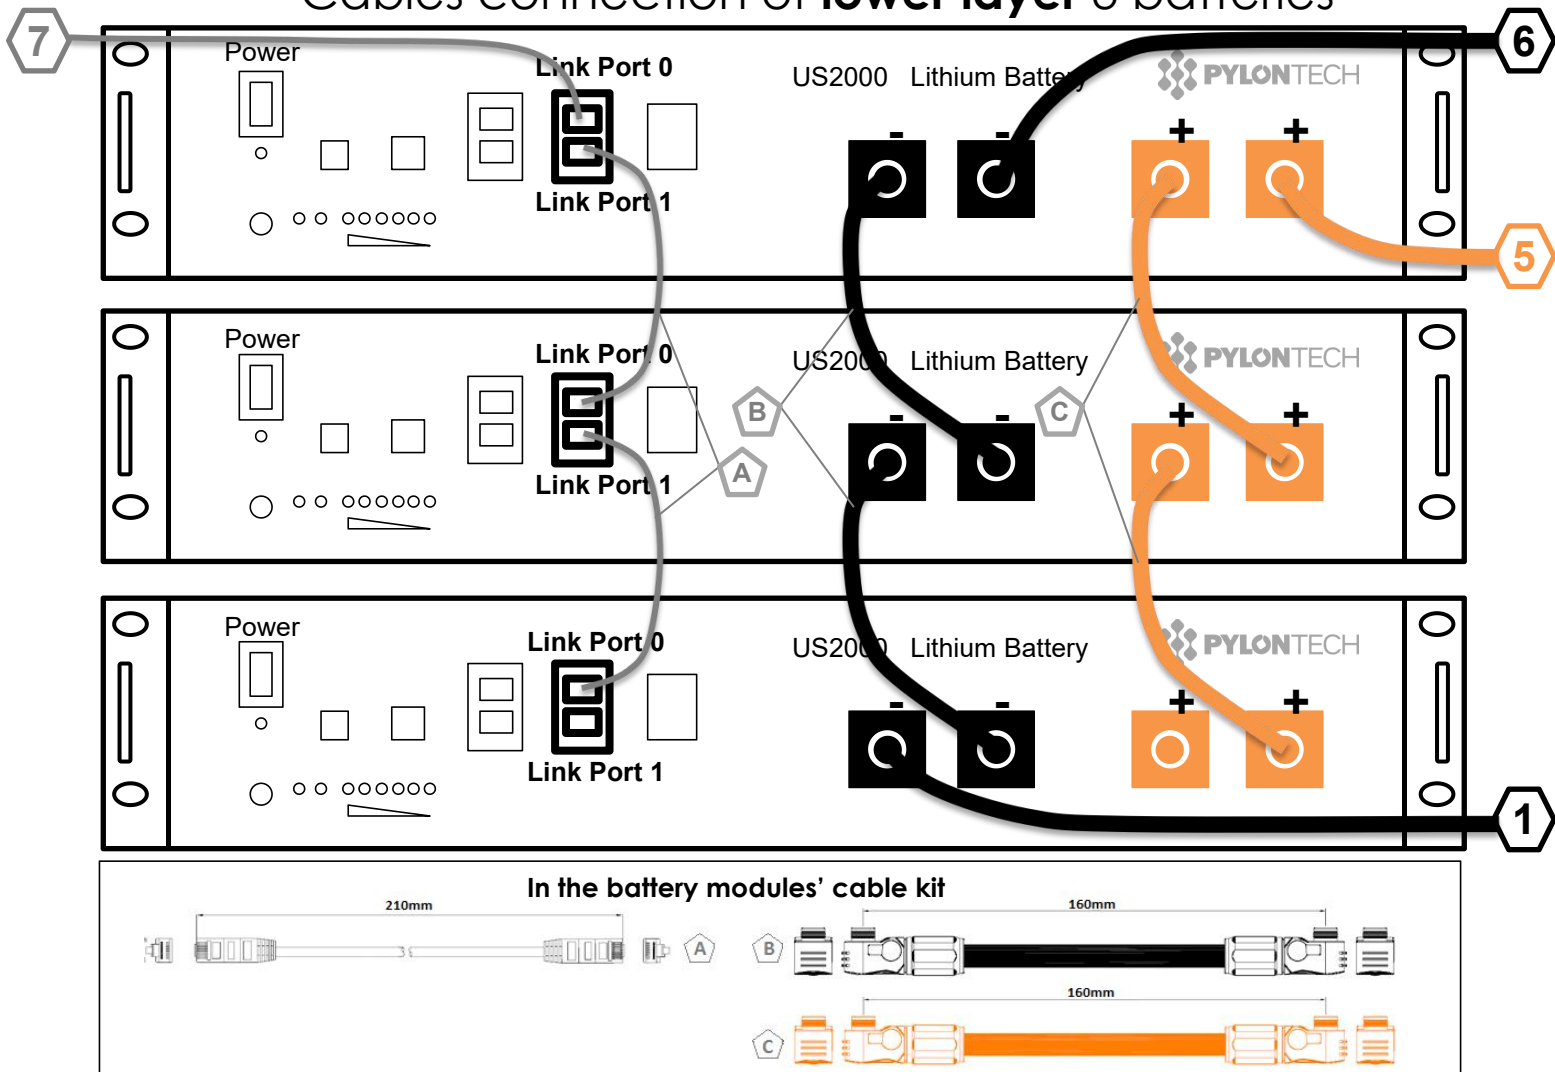


Cables connection of **upper layer** 3 batteries

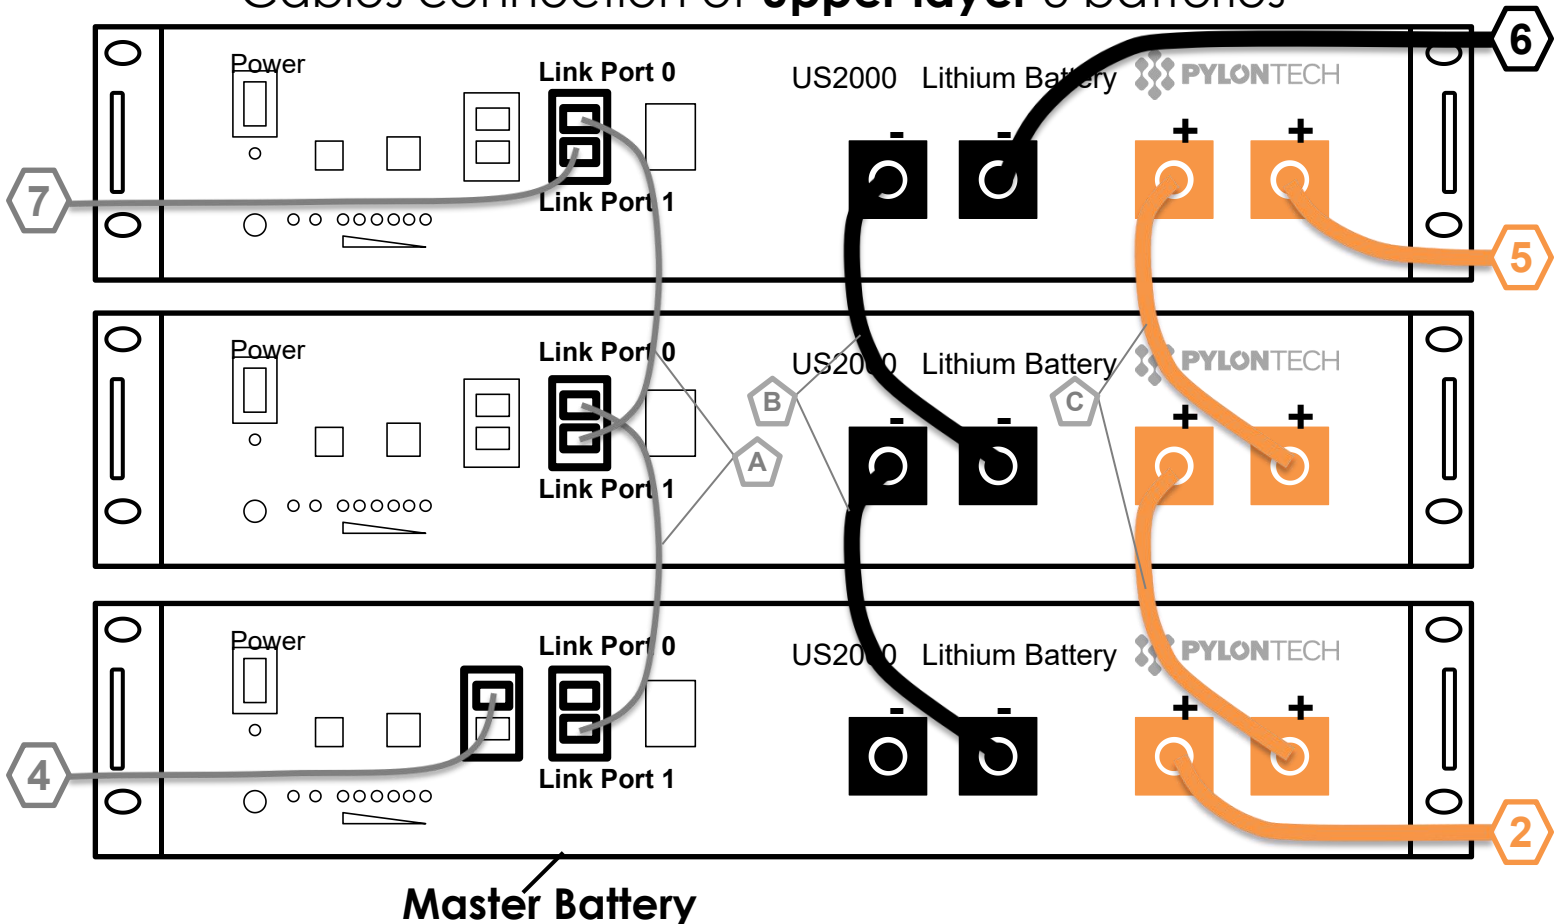

Unpack the corrugated carton.


And lift the cabinet from the carton.

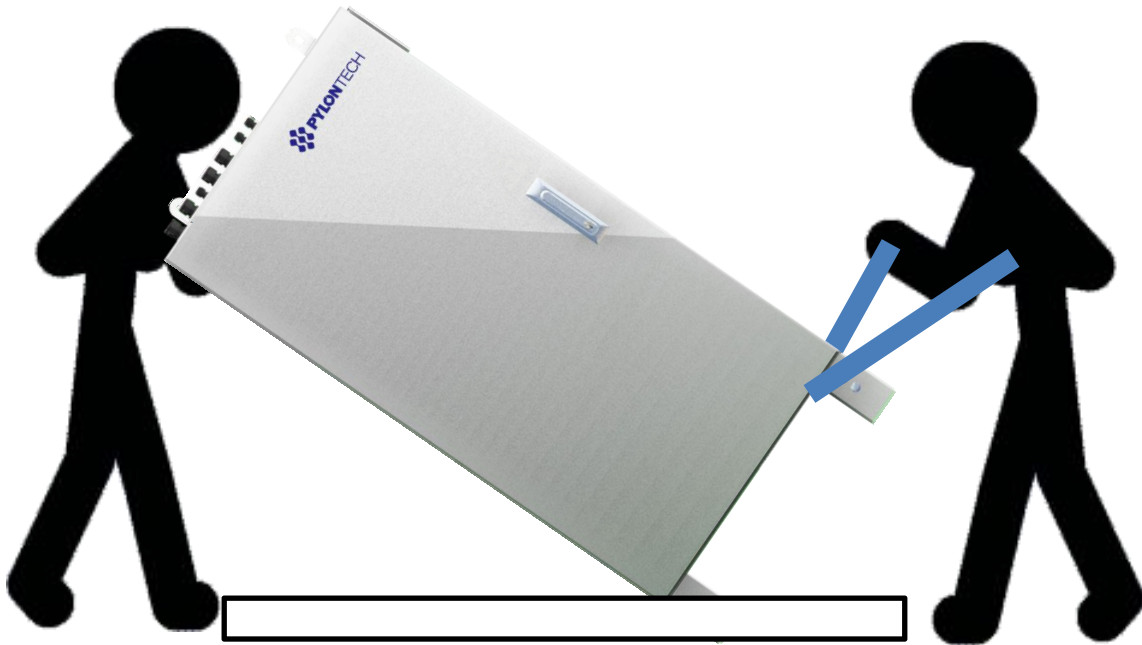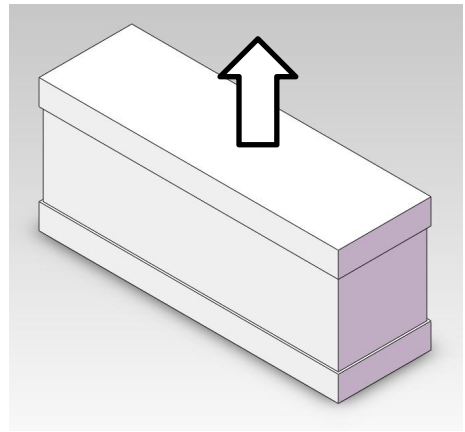

Move the cabinet to the basement.


Please use the attached 2 wide nylon belts to handling cabinet.



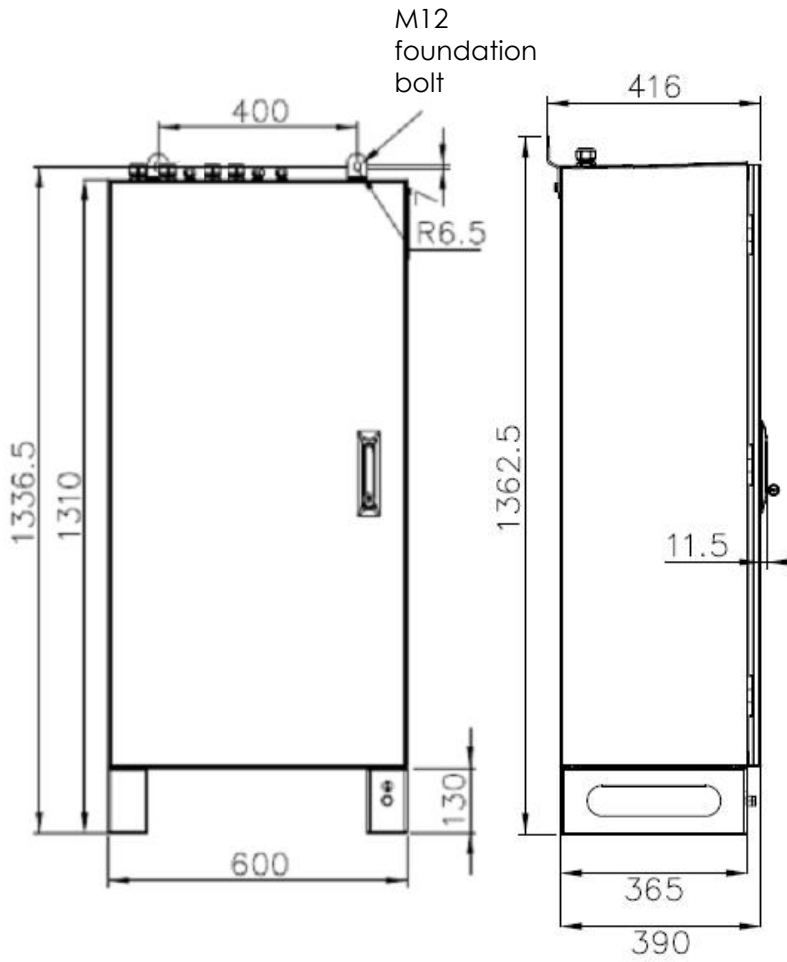


Fix with the hangers (recommend)



Install the 2 hangers to back face of outside.
Dismantel these 2 screws to pull the cables out.

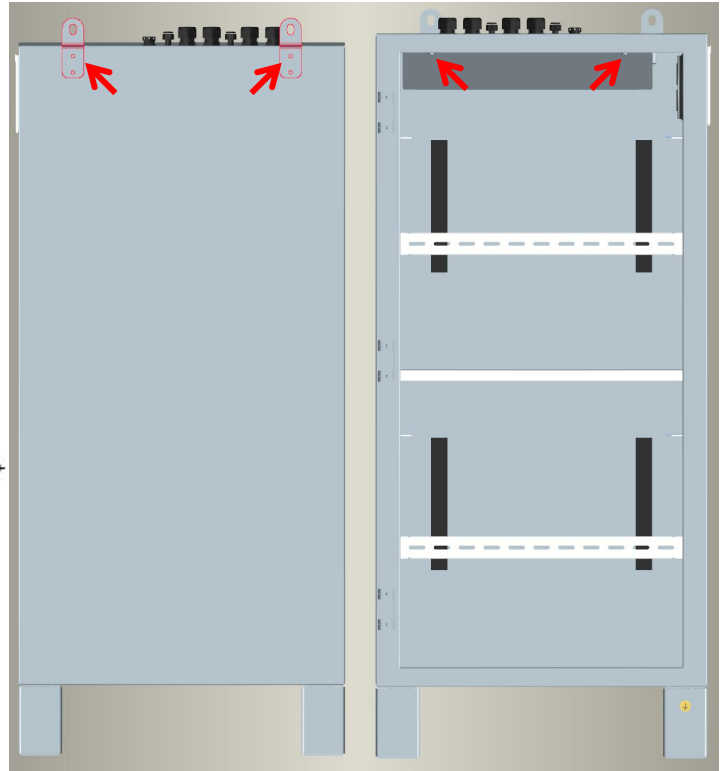

Or fix the cabinet with the cabinet feet.

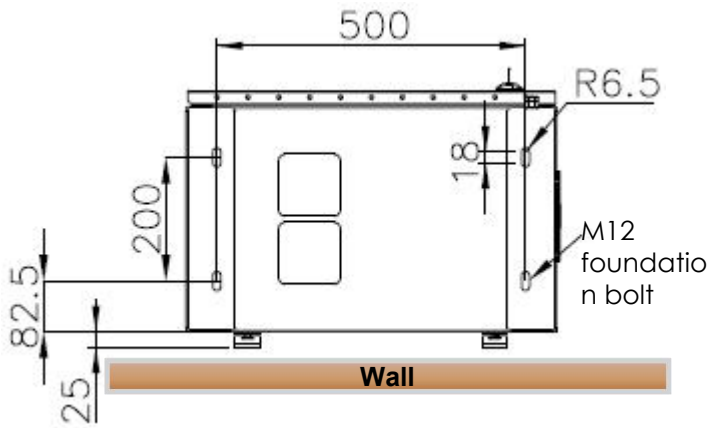

Connect the grounding cable from basement.

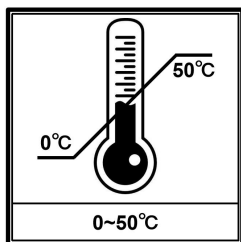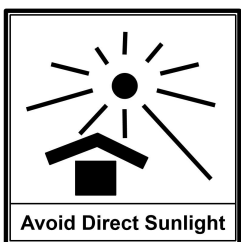

Take away the 4 shield sleeves on the rails. Put 3 batteries on the under layer. And lock the blade bolt. Align the calibration and the battery's hole.



Lock the 6 dowels for these 3 batteries.








- Connect the cables of **lower layer** 3 batteries. Please see < Cabinet OD Cable Connection >.

Put the separate board on the 4 stop blocks.

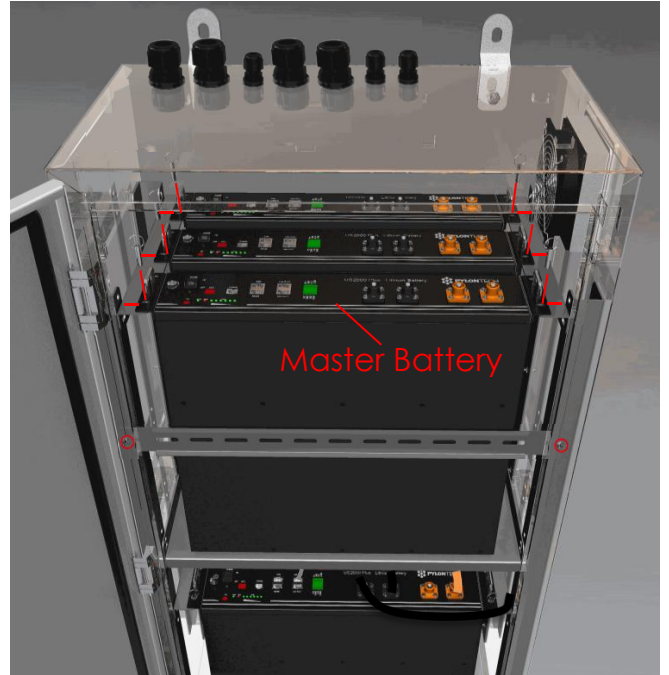

Install 3 batteries on the upper layer just like under layer. And lock the blade bolt.



- Connect the cables of **lower layer** 3 batteries. Please see < Cabinet OD Cable Connection >.
- Connect the     cable terminals to the inverter.
- Turn on each battery's power switch.
- Press Master Battery's soft start button. Please refer to product menu for detailed operation guidance.



PYLONTECH

Pylon Technologies Co., Ltd.

No. 73, Lane 887, ZuChongzhi Road, Zhangjiang Hi-Tech Park
Pudong, Shanghai 201203, China

T +86-21-51317697 | **F** +86-21-51317698

E service@pylontech.com.cn

W www.pylontech.com.cn

Available at www.outbackmarine.com.au