



**HIGH ENERGY
ALTERNATOR REGULATOR**

Victron Cerbo GX
Integration Guide





PHYSICAL CONNECTION



Using a standard Cat5/6 ethernet cable, connect Zeus (via CANBUS port) to the Cerbo (via VE.Can port).

ZEUS CONFIGURATION

1. In the ARCO App, connect to your Zeus and click 'View Device.'


2. Select 'Live Details.'



3. Select 'Settings.'



4. Select the 'Regulator' tab.

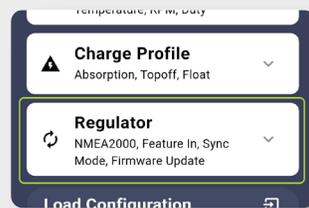


5. Scroll down until you see 'Sync Mode' and click on the text, then select 'Victron Follower.'



6. With 'Victron Follower' mode selected, save your changes.

Zeus is now configured!

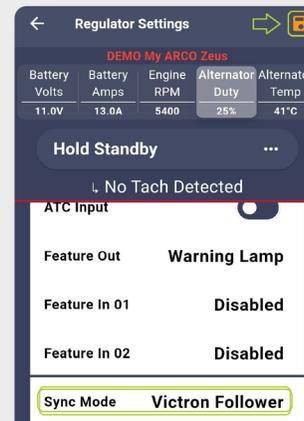



CERBO GX CONFIGURATION



1. Under 'Settings' select 'Services.'
2. Select 'VE.Can port.'
3. For the 'CAN-bus profile' select the option for 'VE.Can & Lynx Ion BMS (250kbit/s).'

The Cerbo is now configured!

NETWORK DIAGRAM

